
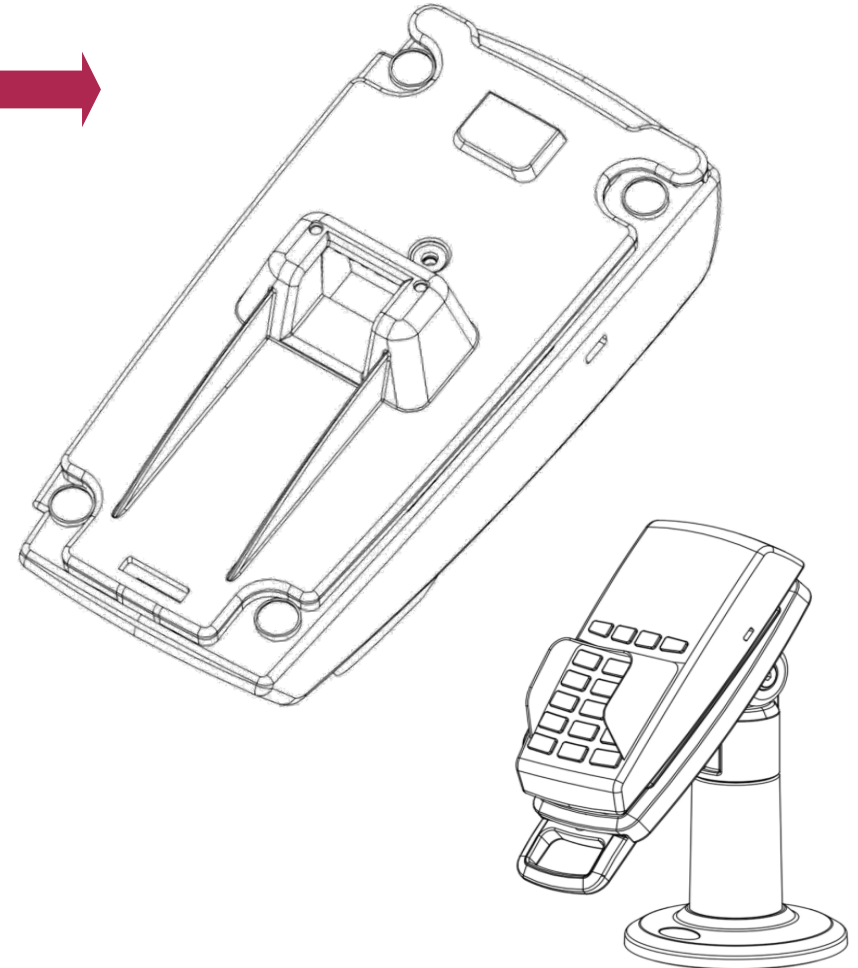


Ingenico iPP320/350 Backplate

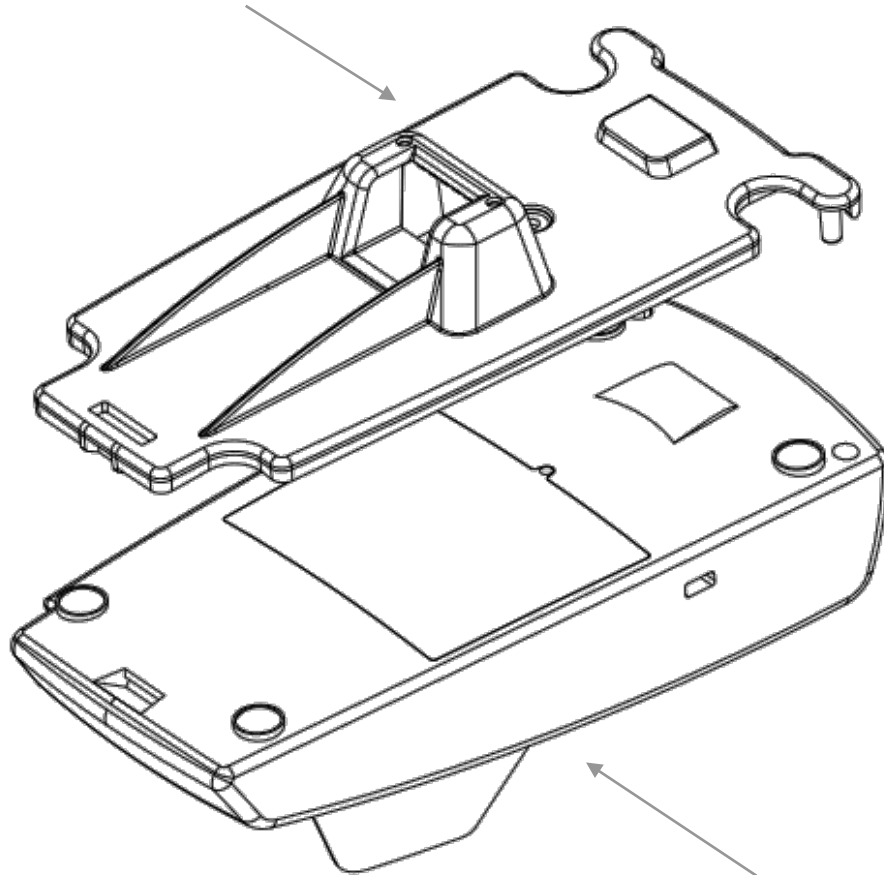

Ingenico IPP320/350 - PEDPack

Quick Installation Guide


NOTE

Quick &
Easy Install

No tools
required


PARTS

x1

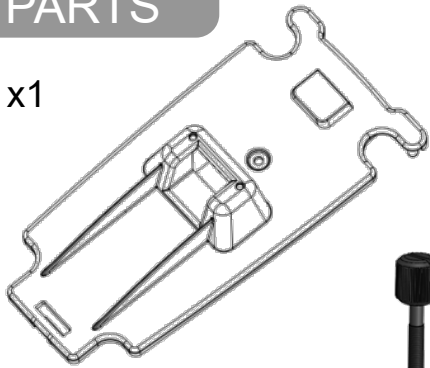


1A

Remove screw if
present

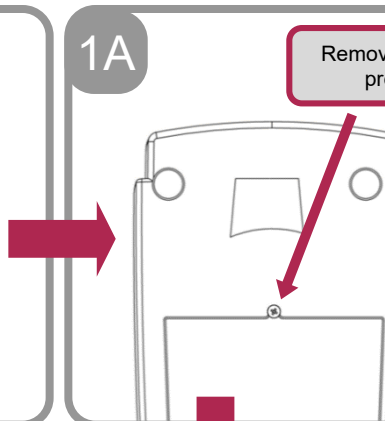


1B

Locate
bosses in
holes

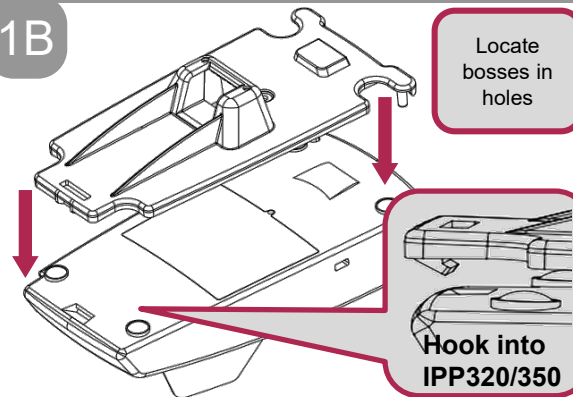


2

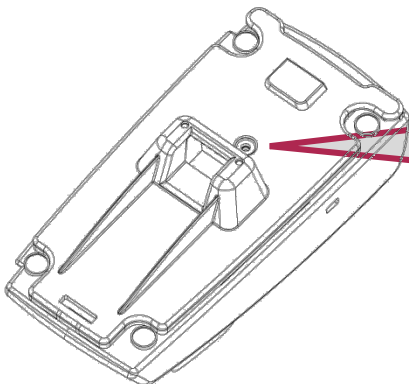

x1
Tighten screw
until secure

3

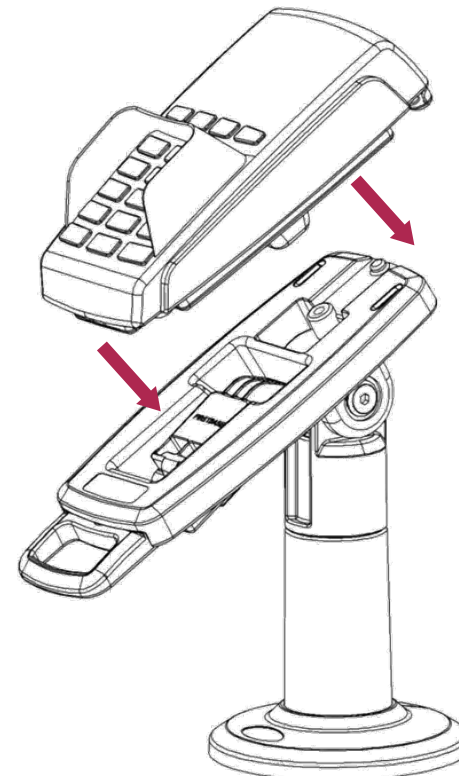


4

OPTIONAL

If locking device, turn key
then remove to secure.

To unlock, first ensure
key fitted.

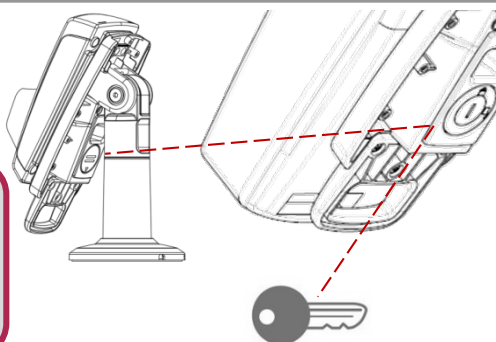

To remove device...

