



# Worldline Yomova PEDPack

## Quick Installation Guide

### TOOLS

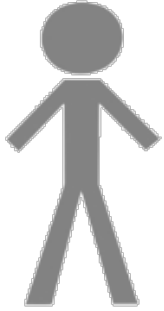

### PARTS

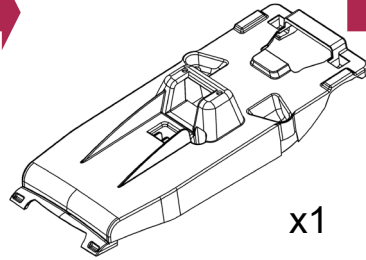

1

Remove battery cover from PED

Remove and discard screws from PED

2

Attach PEDPack from lower end of PED. Ensure location into battery cover area

3

Fix with supplied screw

4

Fit PED onto plinth

5

GENERIC PED SHOWN

#### OPTIONAL

If locking device, turn key then remove to secure.

To unlock, first ensure key fitted.

