

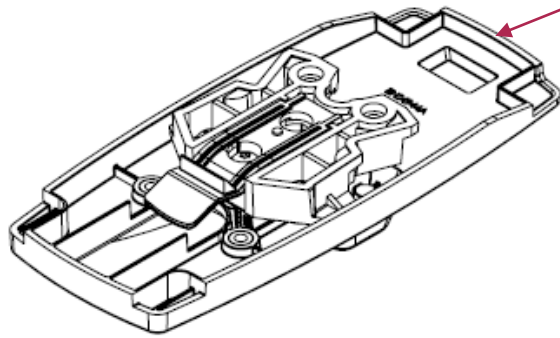


CST00166

Quick Installation Guide

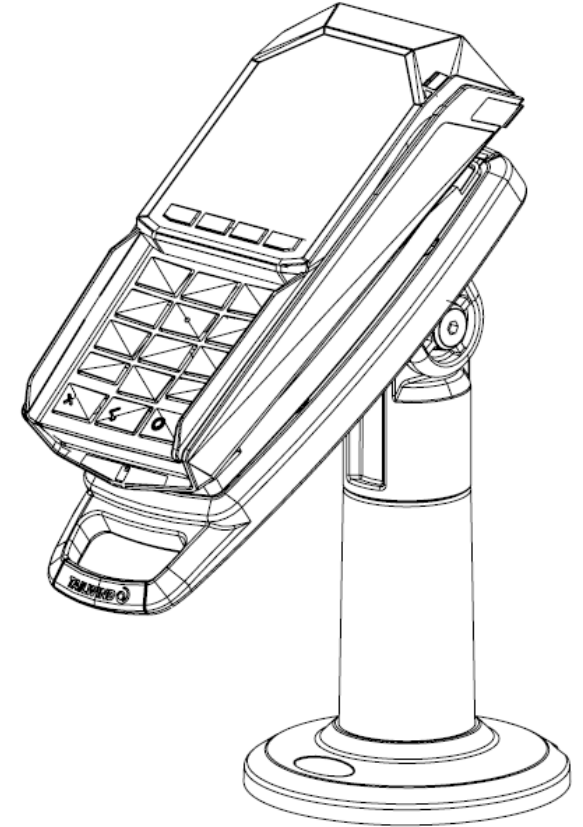

Lane 3000/7000/8000
& Desk 1500 Backplate

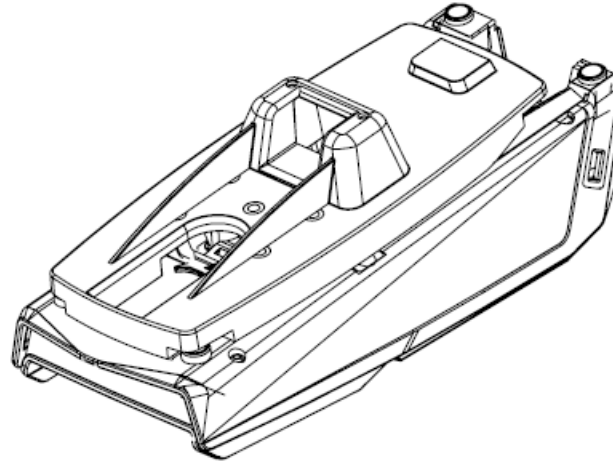

Lane 3000/7000/8000 or Desk 1500
Payment Terminal


Ingenico Lane 3000/7000/8000 & Desk 1500 Backplate

(CST00166) Quick Installation Guide

TOOLS




PARTS

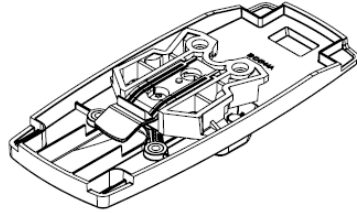

1 X Backplate (CST00166)
For use with Ingenico Lane 3000/7000/8000 or Desk 1500


1

Place terminal onto backplate and slide forward until click.

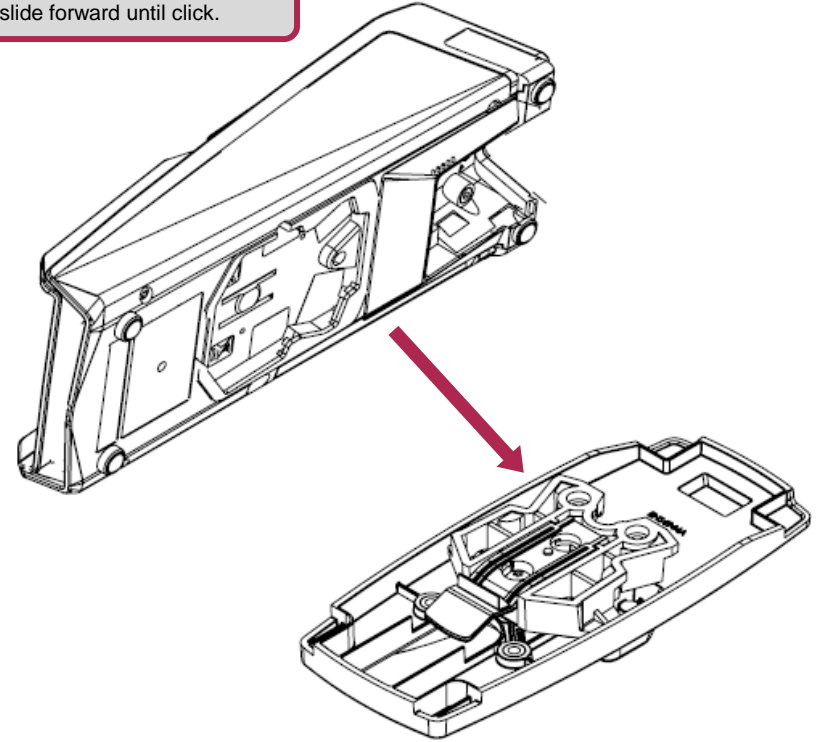


3

Fit terminal onto stand.
Press firmly until click.

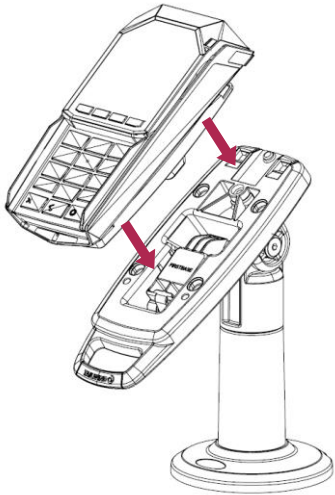


2

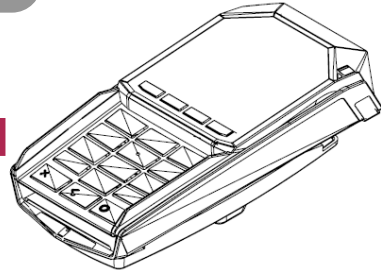

OPTIONAL

SAFEBASE OPTION

To lock device, turn key clockwise then remove key.
To unlock, turn counter-clockwise.

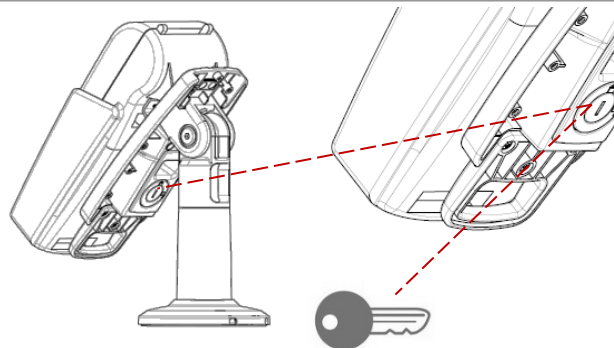

To remove device

